

10"



CHALLENGER W10 PRO QUICK START GUIDE

Quick Start Guide

Turning on your tablet

1. The Power button is located on the front your tablet. Press and hold it for 5-10 seconds to turn the device on or off

Enabling Tablet Mode

1. Go to your Desktop
2. Go to the chat bubble notification icon on the bottom right corner of the screen.
3. Click on the "Tablet Mode" box


Contact us

Website: www.ruggedtablets.com


Email: info@minnotablet.com

Phone: +1 805-962-3084




Front View

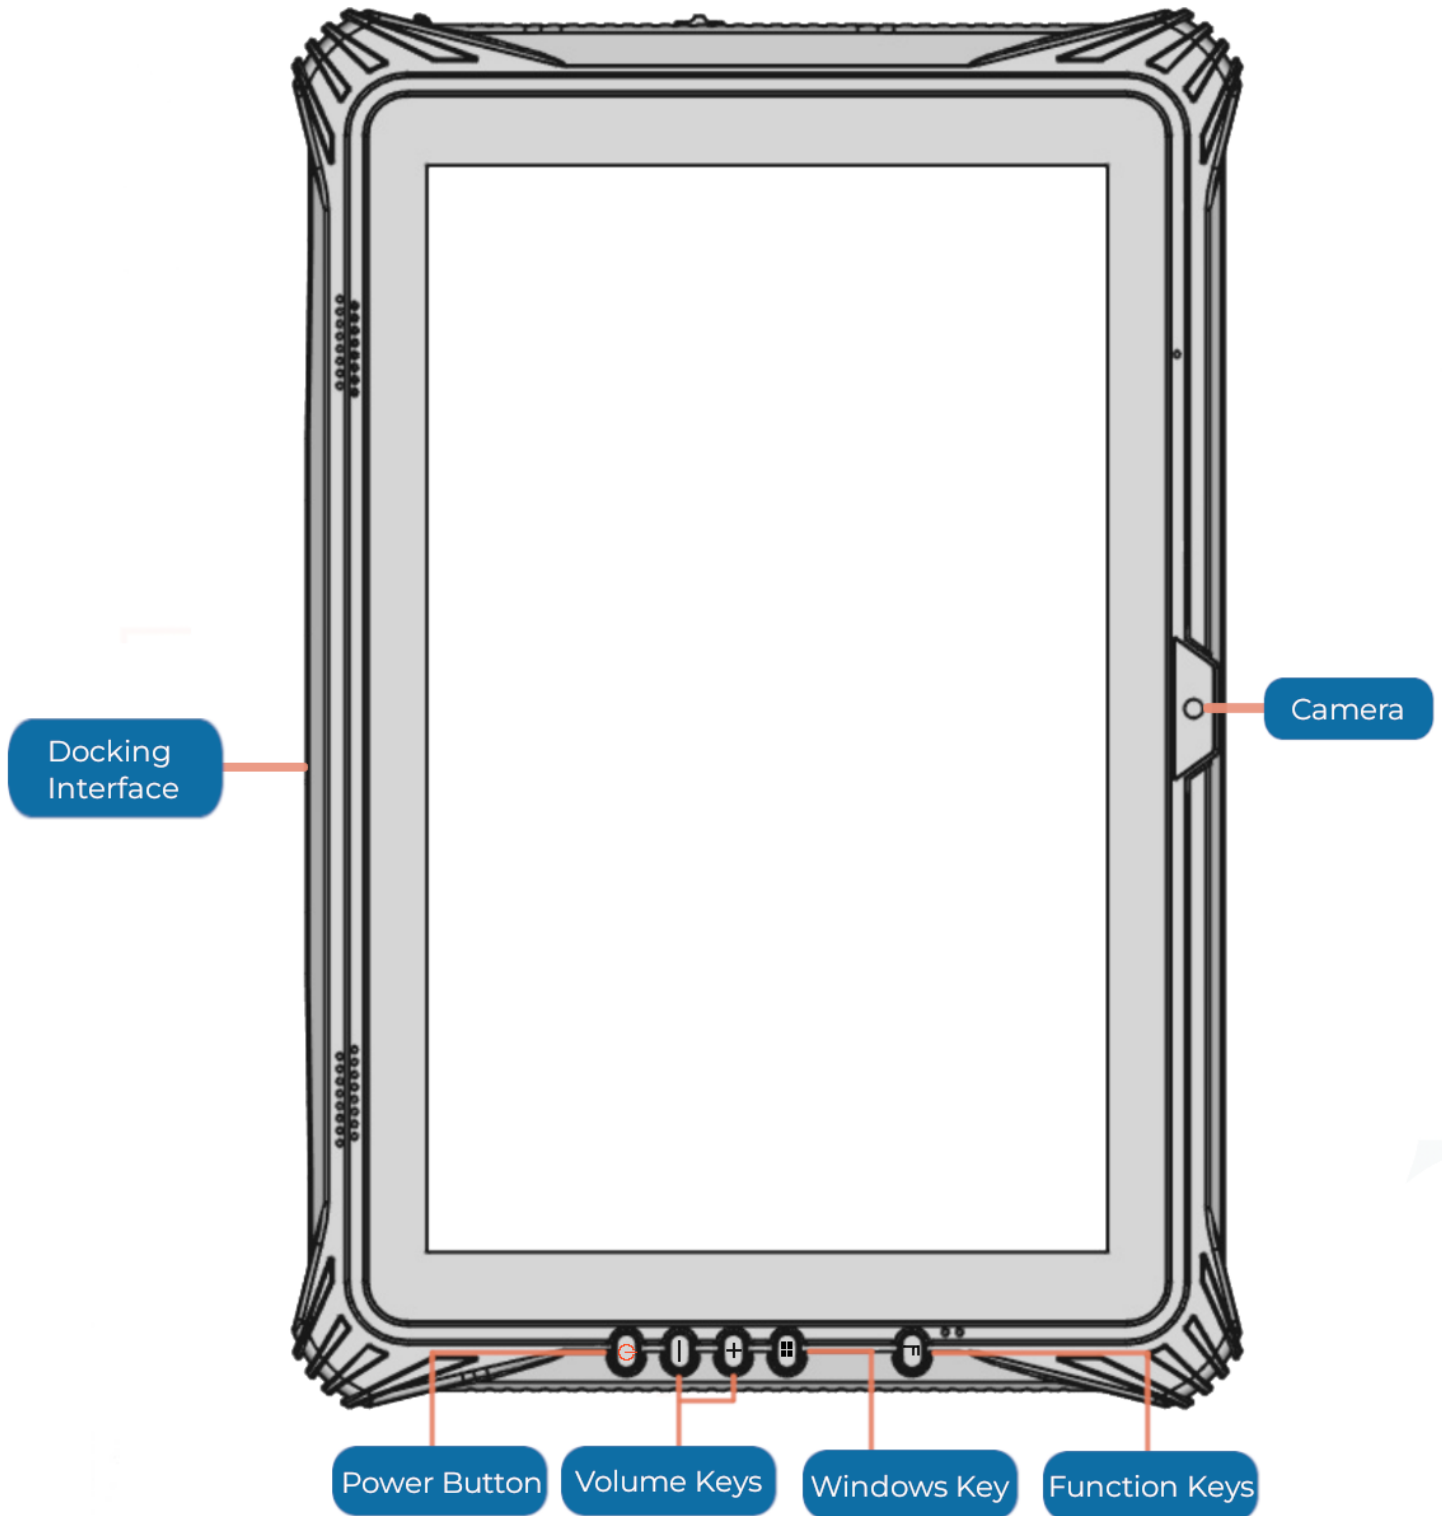

Back View

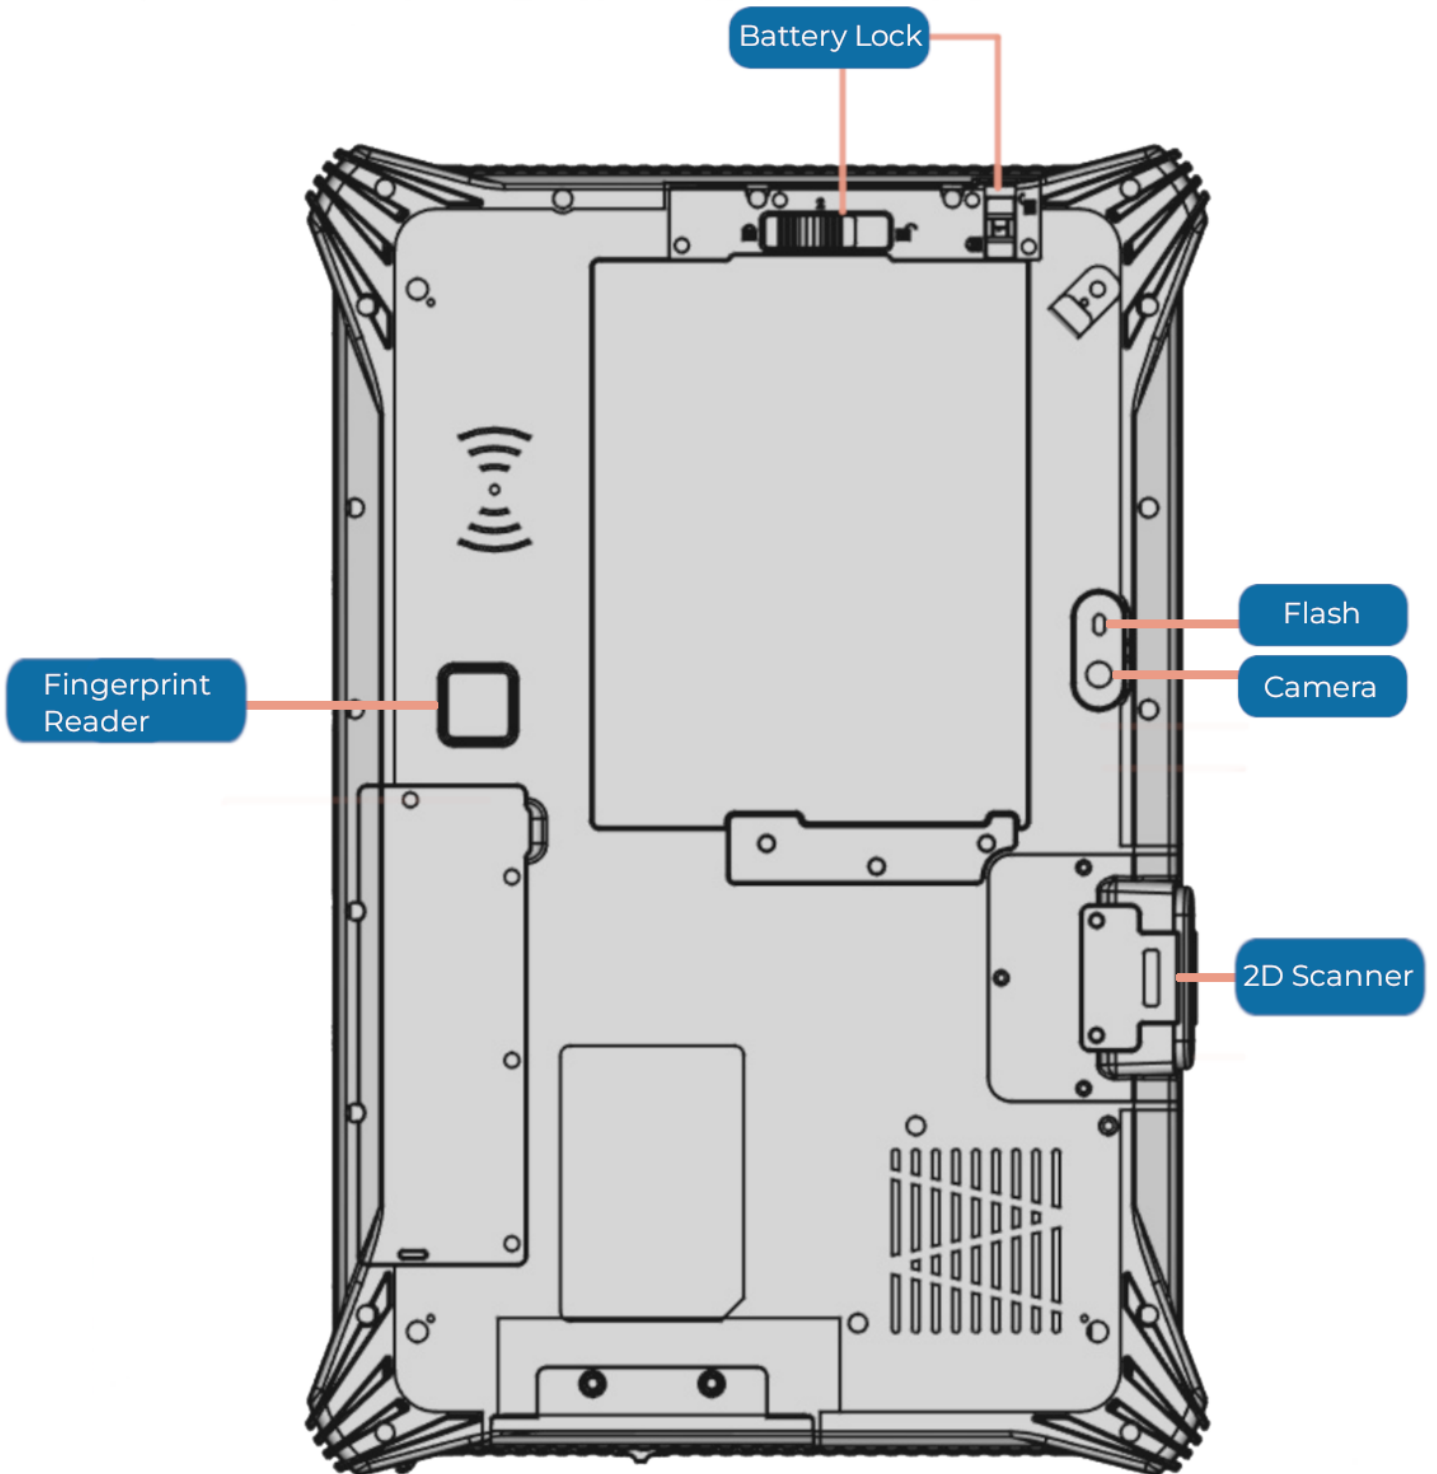


Side View

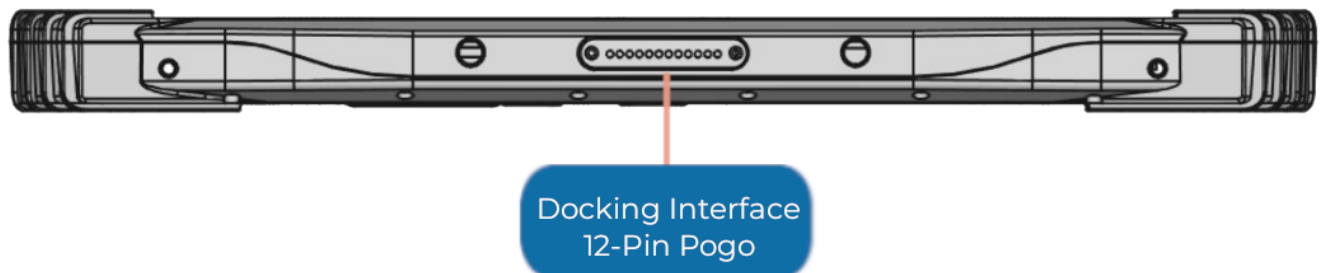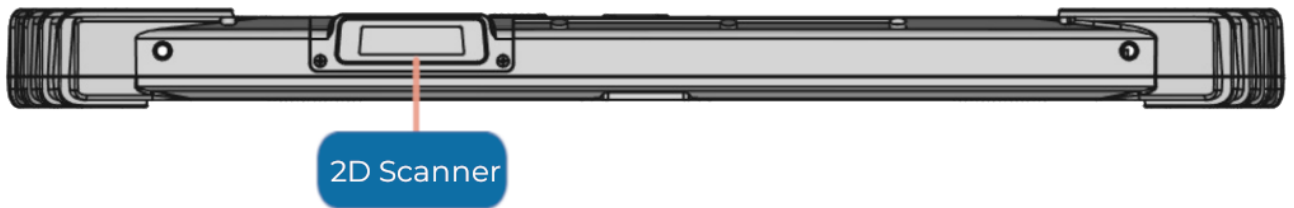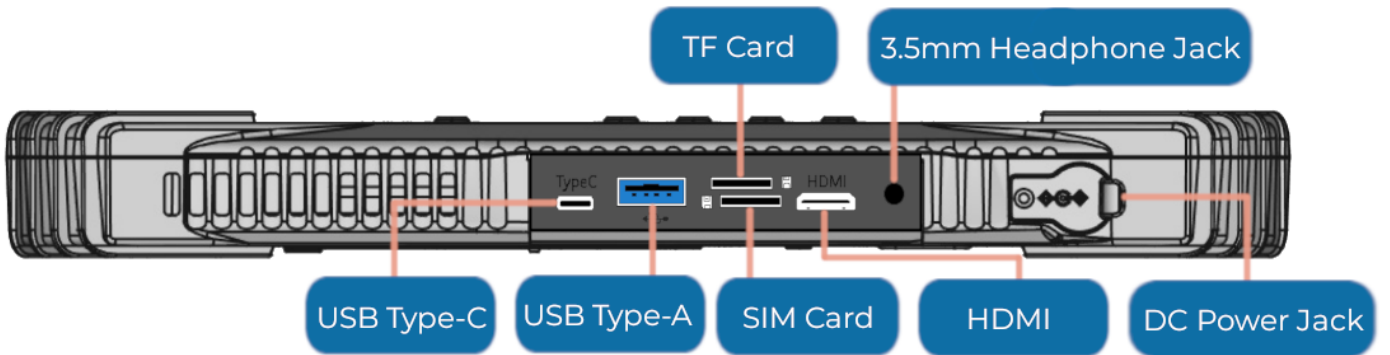


Memory & SIM Installation

Slide out the card tray and Insert the Micro SD, NC Card and Nano SIM card into the corresponding slots, then insert the tray in the direction shown in the diagram. The slots are located underneath the battery on the tablet.

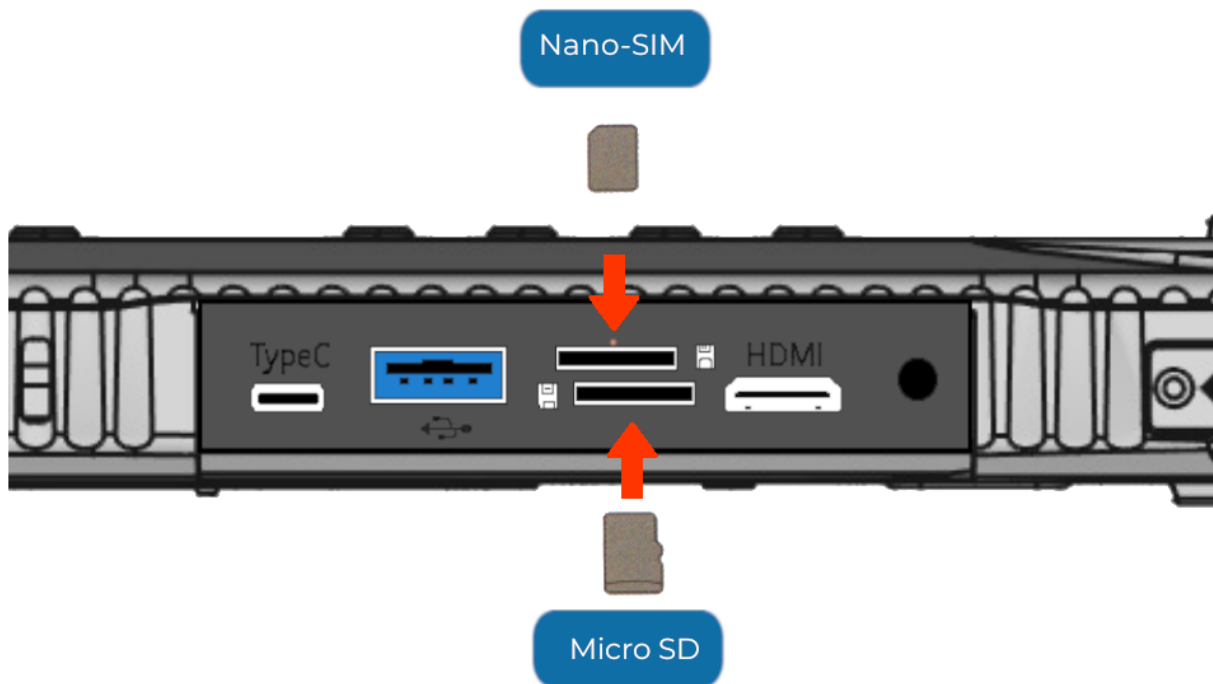

Battery Swap

Please install the battery in the correct order.

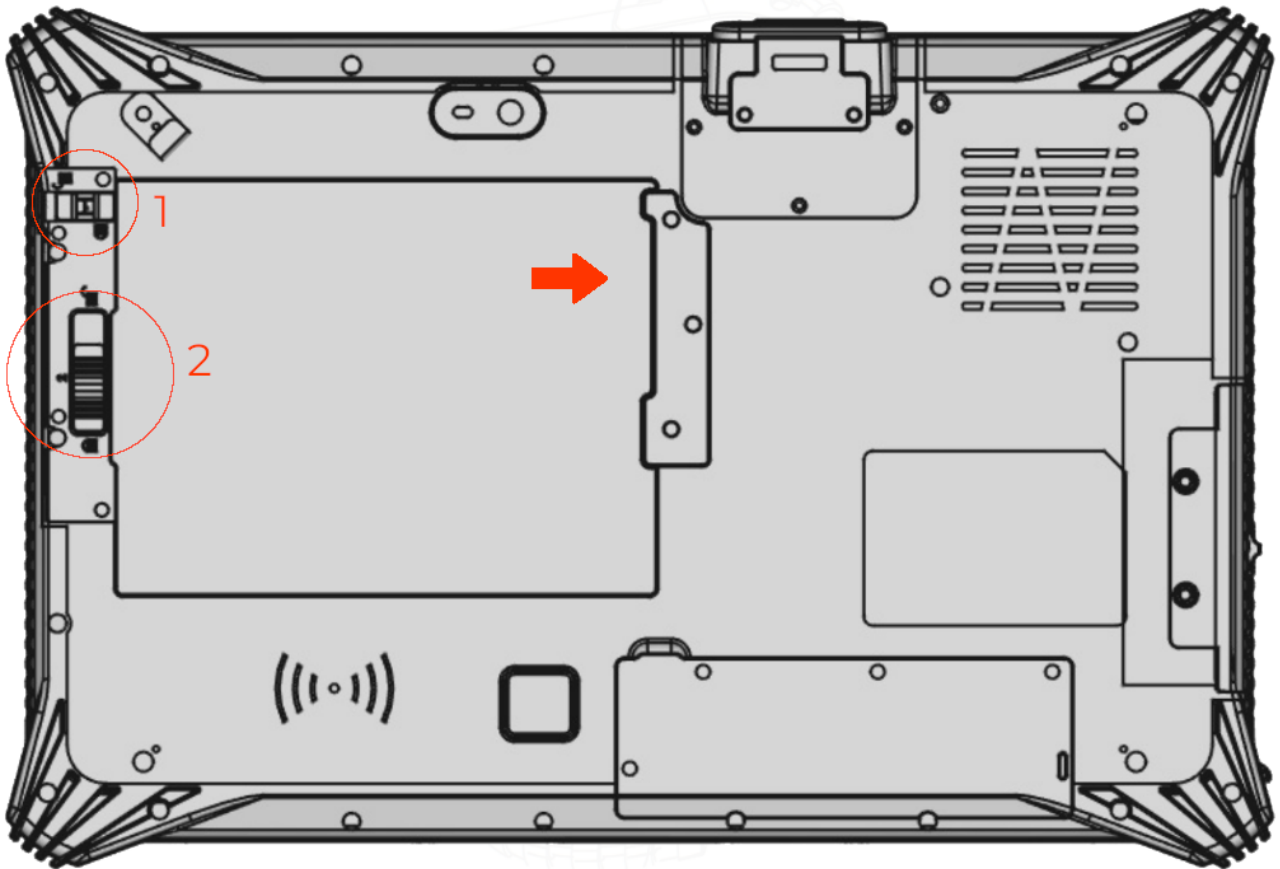

1. Make sure the battery lock is disengaged (1)
2. Pull the battery up using the battery lock release (2)
3. Replace battery while using the battery lock release (2)
4. Re-engage the battery lock (1)