

10"



RESILIENT A10 QUICK START GUIDE

Quick Start Guide

Turning on your tablet

1. The Power button is located on the top of your tablet. Press and hold it for 5-10 seconds to turn the device on or off

Brightness Settings

1. On the home screen, swipe down from the top of the screen to reveal the quick-access menu.
2. Swipe down again to reveal the brightness slider.

Connect to a Wi-Fi Network

1. On the home screen, swipe down from the top of the screen to reveal the quick-access menu.
2. Swipe down again to reveal the full icon menu.
3. Press and hold the Wi-Fi icon; this will open the Wi-Fi menu which has the option to connect and disconnect to a Wi-Fi network.

Connect to a Bluetooth device

1. On the home screen, swipe down from the top of the screen to reveal the quick-access menu.
2. Swipe down again to reveal the full icon menu.
3. Press and hold the Bluetooth icon; this will open the Bluetooth menu which has the option to pair and unpair with a Bluetooth device.

 
Contact us

Website: www.ruggedtablets.com


Email: info@minnotablet.com

Phone: +1 805-962-3084





Front View

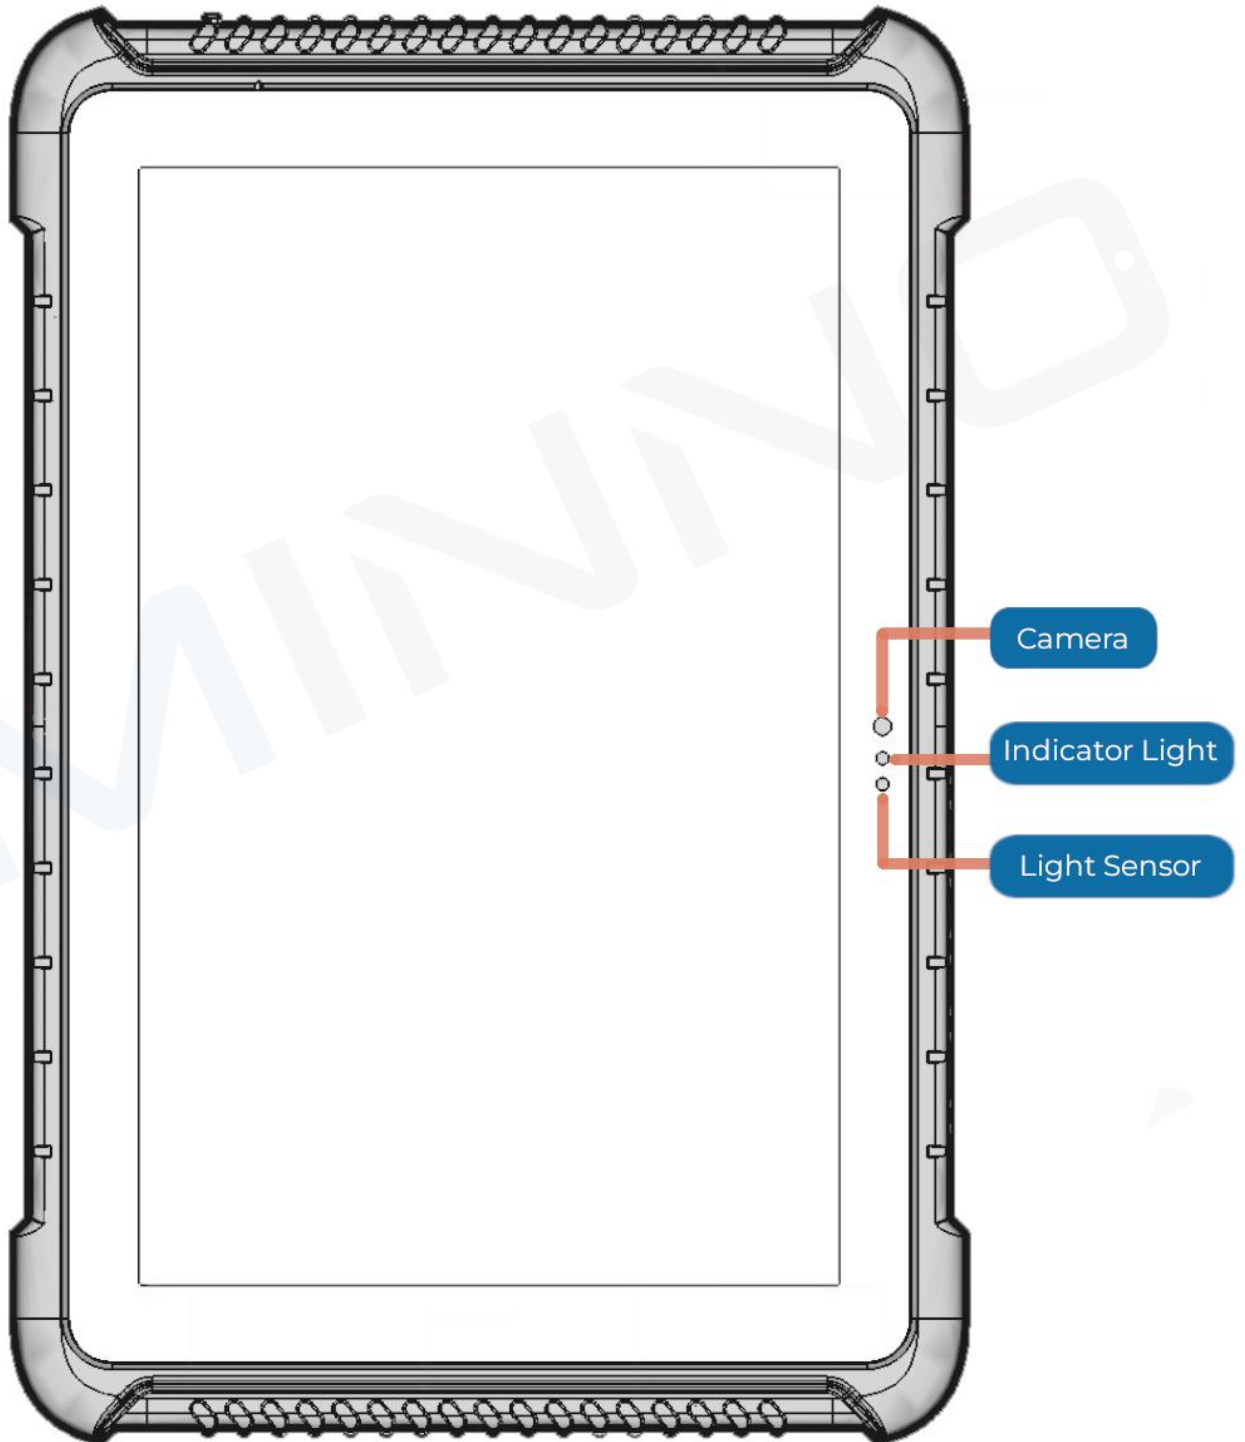

Back View

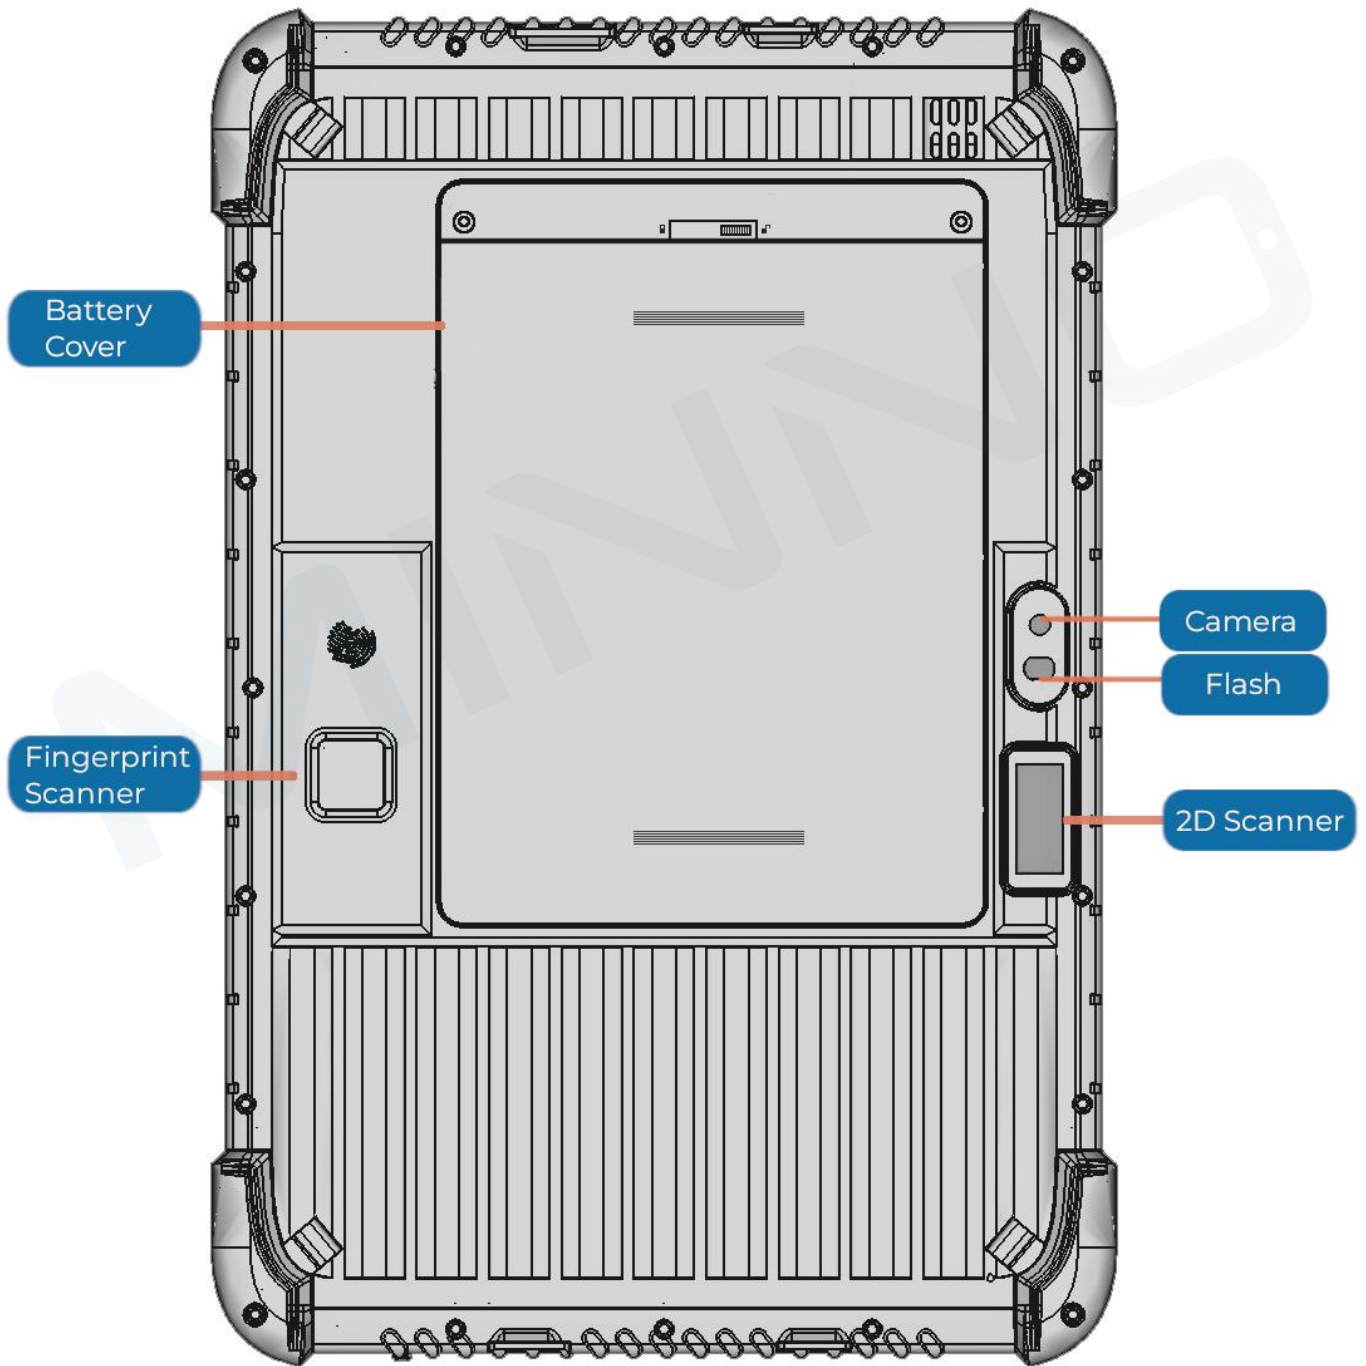 


Side View

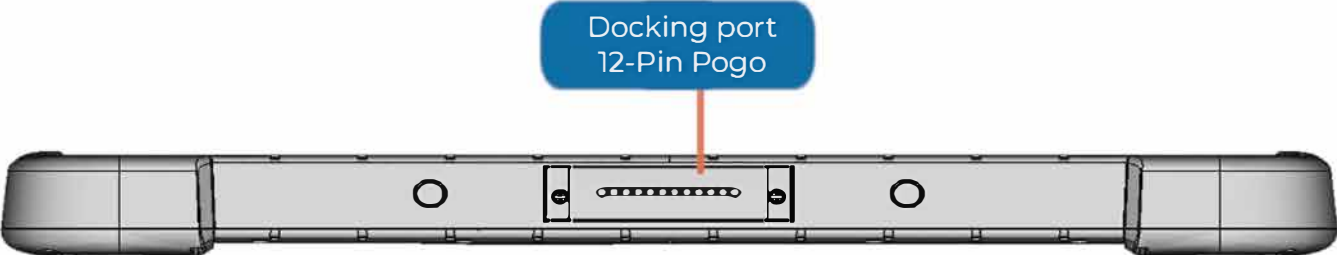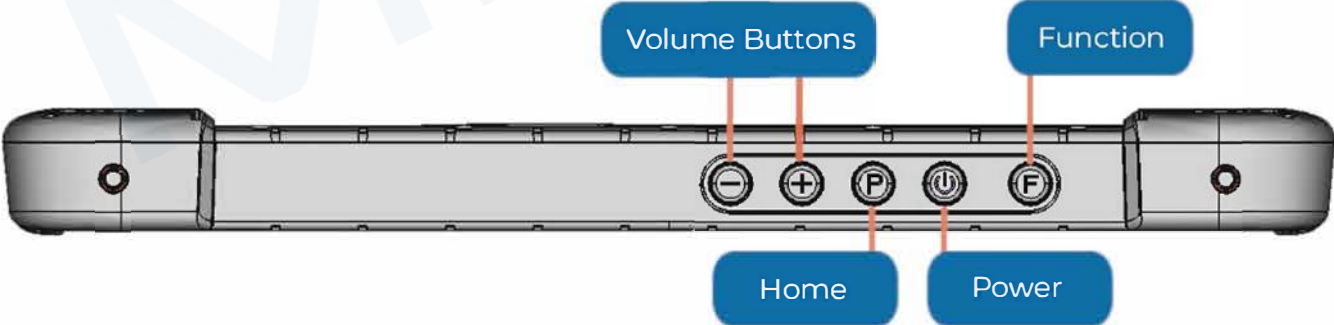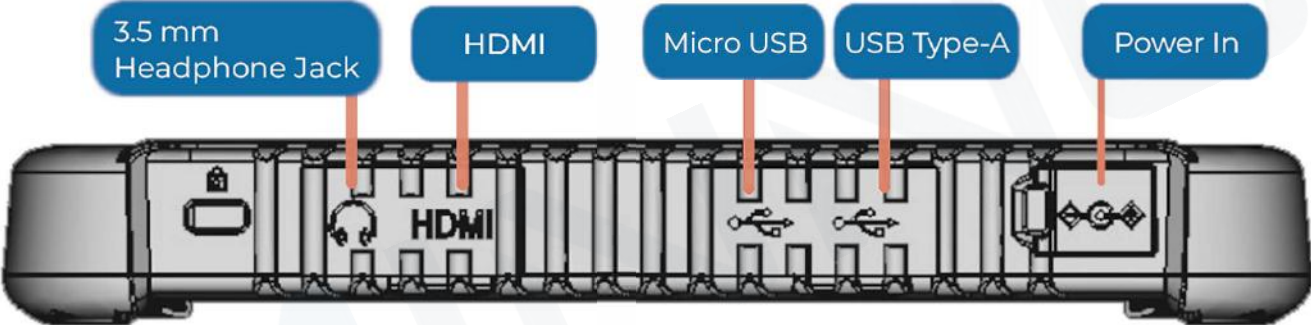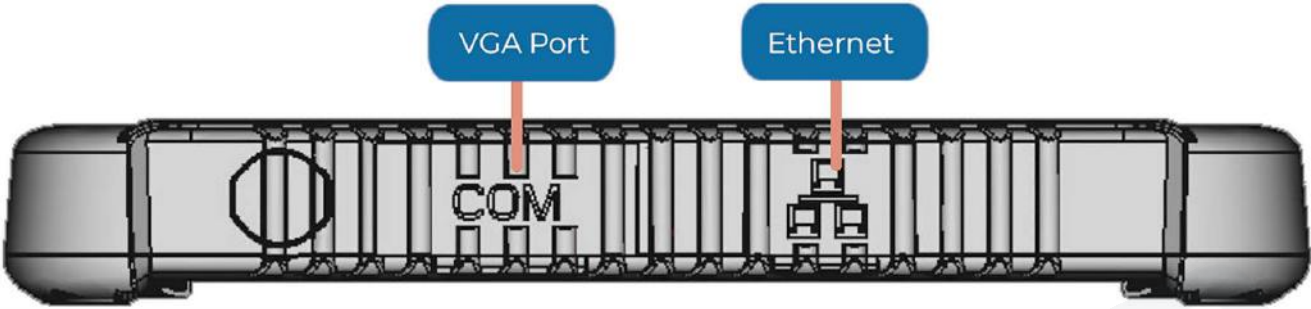    


Memory & SIM Installation

 Slide out the card tray and Insert the Micro SD (down) and Nano SIM (Up) card into the corresponding slots. The slots are located underneath the battery on the tablet.

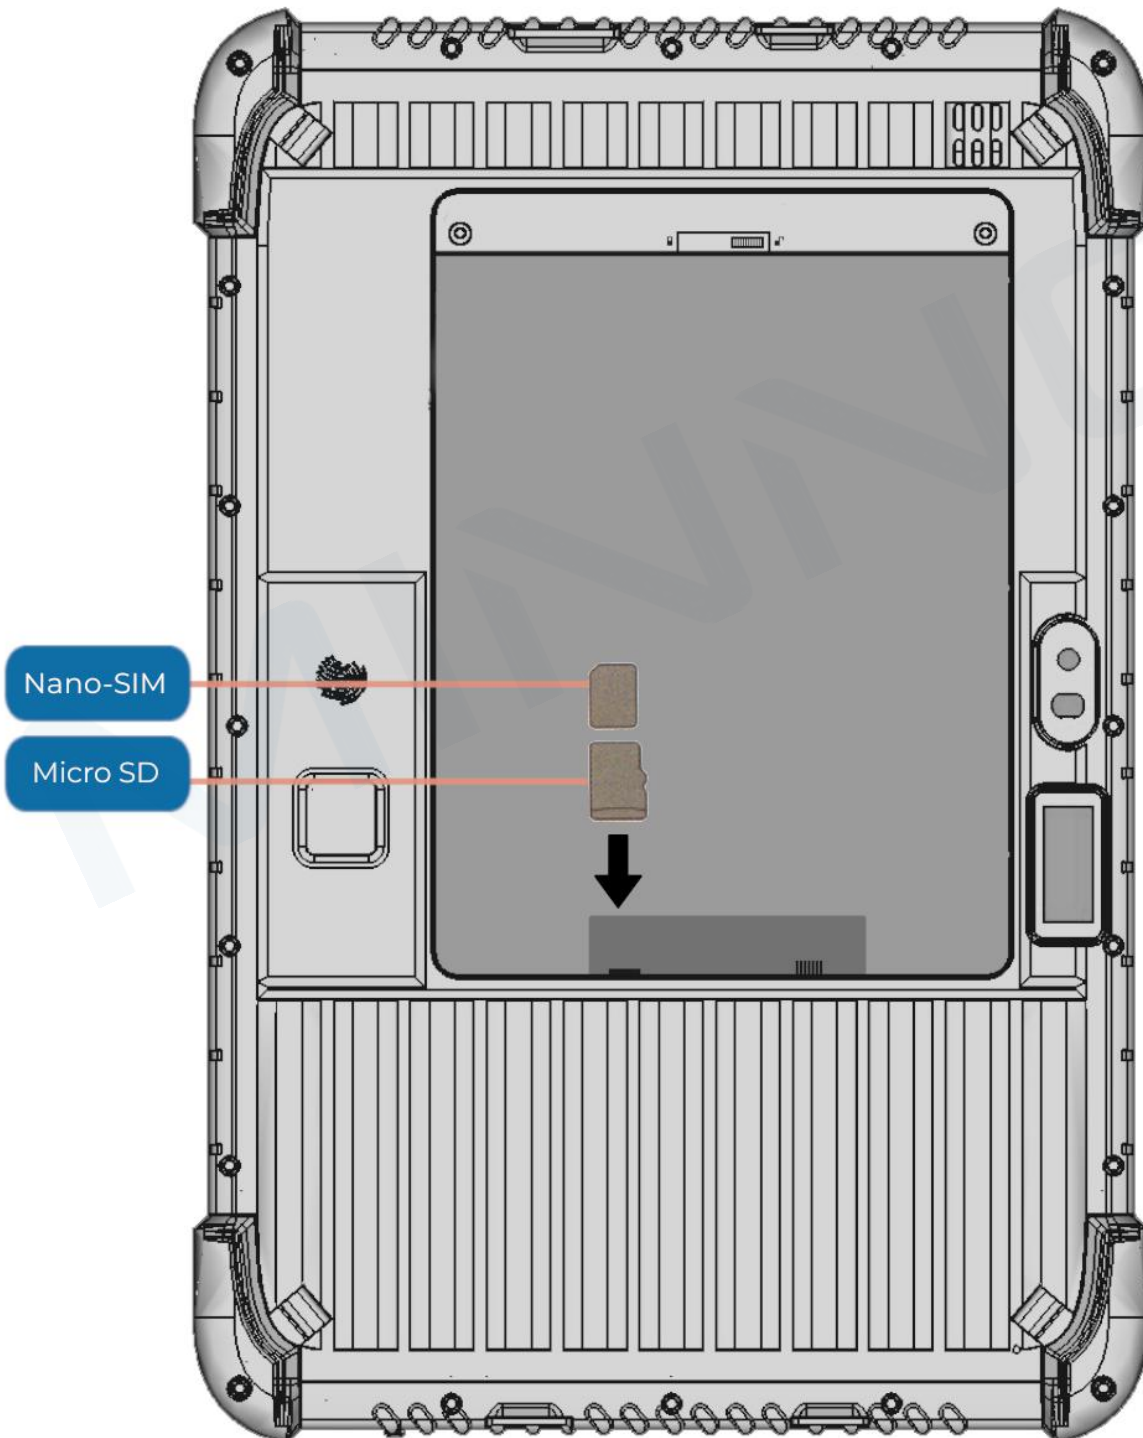

Battery Swap

 Install the battery in the correct order.

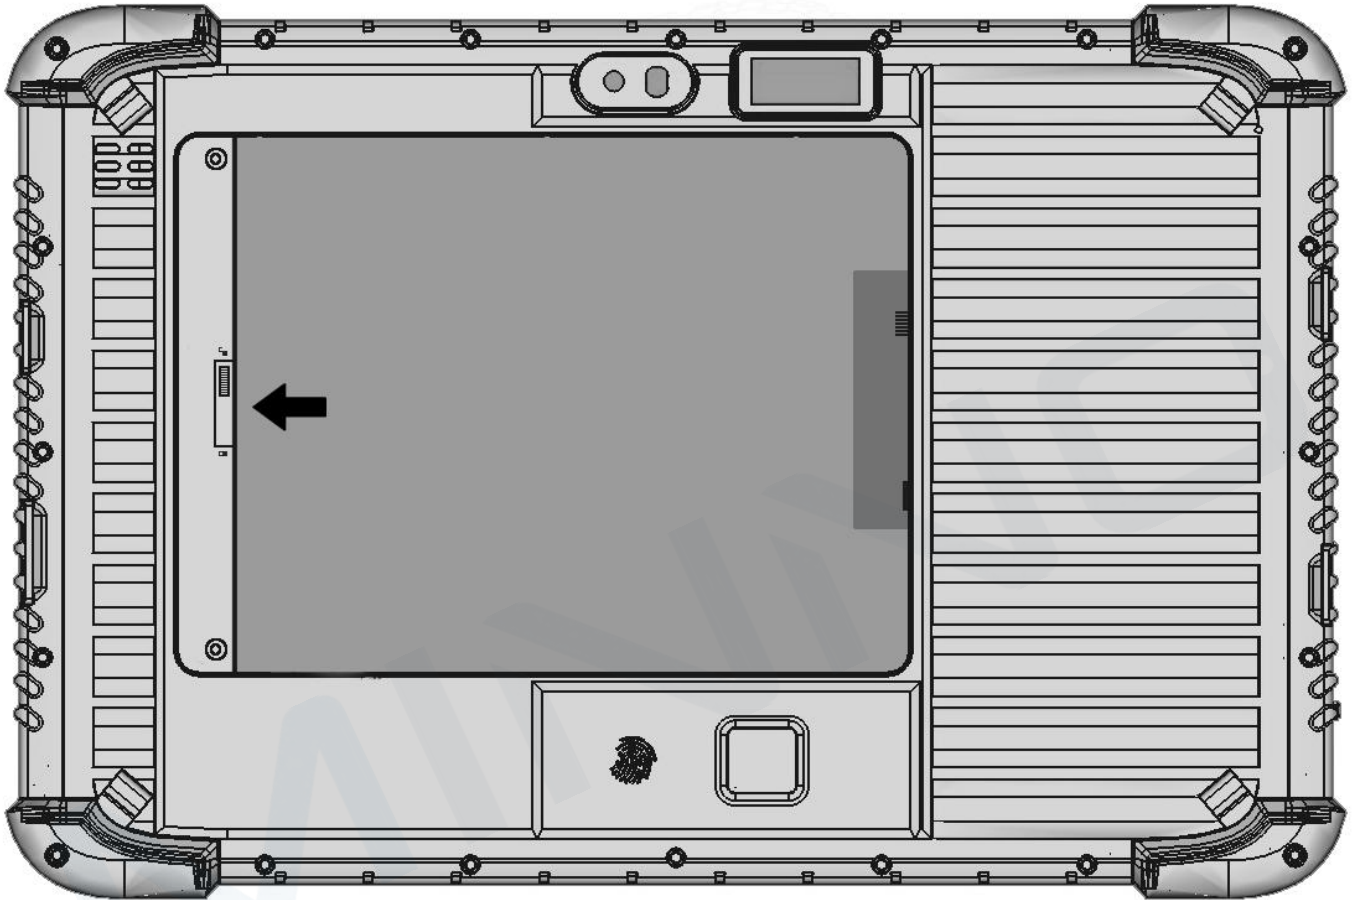

1. Disengage the battery lock
2. Push the battery toward the lock
3. Lift the battery out of the tablet
4. Replace the battery
5. Push the battery back into the pins
6. Re-engage the battery lock